



Quick Reference Guide



VT55 & OBDII

Customer Service

1-888-621-TPMS

1-888-621-8767

Version: MJC-1108-US1

Section A - General Description

Section B - Triggering a Sensor / Results Description

Section C - Using OBDII Function / Update Procedure

Section D - Installing USB Drivers

Section E - Installing WEB VT

Section F - Updating VT55 / Printing Results

General Description of THE ATEQ VT55





The principle of this instrument is to awaken and then retrieve data from smart valves mounted on vehicle wheels, in order to check their identifiers.

The instrument interacts with the smart valves to assist technicians service Tire Pressure Monitor Systems (TPMS). VT55 may be equipped with OBDII programmer to reset TPMS for import vehicles.

Front face



Connectors

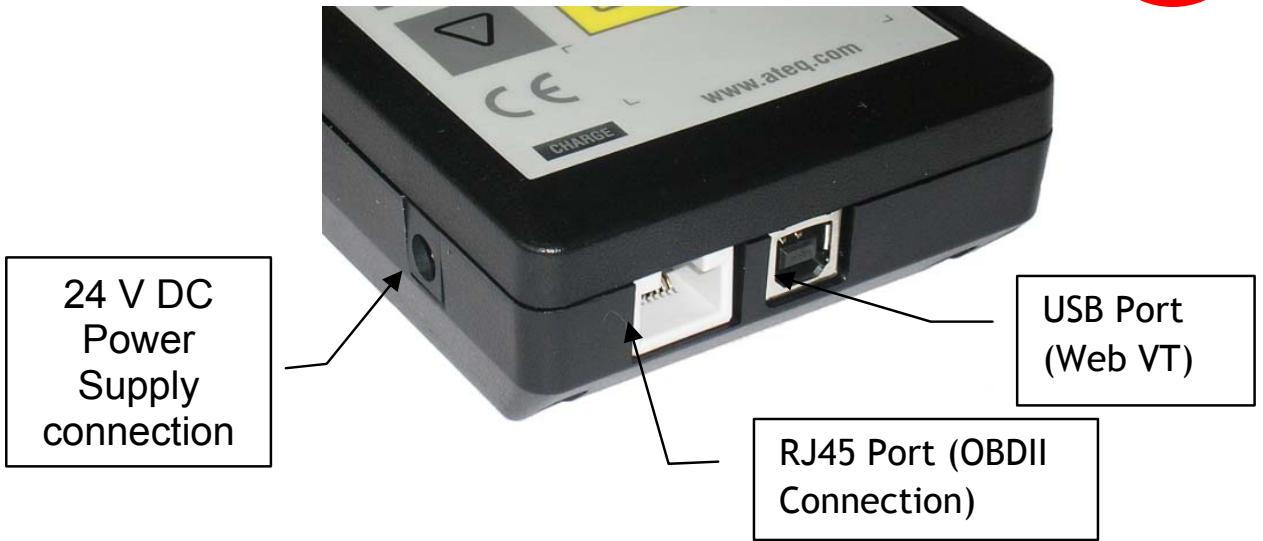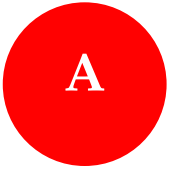

Power Supply connector

	<p>Power supply connection to the tool for charging the internal battery. 24 V DC Supplied with the tool.</p>
--	---


USB connector

	<p>The USB connection allows software updates to be installed onto the tool using the WEB VT program. TPM sensor results can also be printed using this program.</p>
--	--





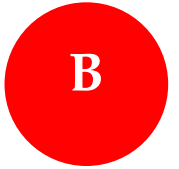


RS232 connector

	<p>The RJ45 connector allows software updates to be installed into the tool and for use of the OBDII programmer.</p>
--	--

SECTION B - TRIGGERING SENSOR(S)






B.1 TESTING A TPM SENSOR

<p>Step 1 - Select the "VEHICLE SELECTION" menu and confirm selection with the  key.</p>	
<p>Step 2 - Select the vehicle brand on the screen by using the  or  keys and confirm selection with the  key.</p>	
<p>Step 3 - Hold the tool within a few inches from the TPM sensor. Some sensor may require the tool position directly on the rubber tire, over the valve stem.</p>	
<p>Some sensors are banded to the wheel and can be located 180° opposite the valve stem. (Refer to owners manual).</p>	

Step 4 - Press the



key. The tool will begin to send LF trigger and the TX light will flash. Depending on the sensor, the tool will activate the sensor on the first or last step. Each step identifies the number of valve types used on the vehicle brand.

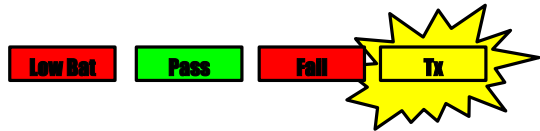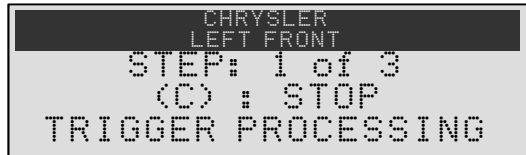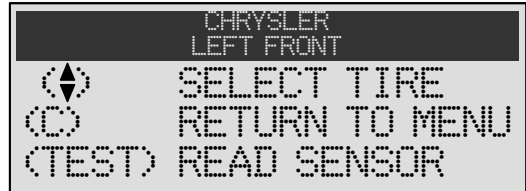




Step 5 - The tool will


vibrate/beep after receiving the sensor information. The tool will display the sensor ID, pressure, and sensor state of the valve that is triggered. If the tool does not receive the correct information, the fail LED will illuminate and you can restart the trigger sequence by pressing the

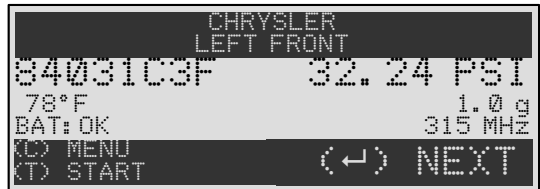

key again.




Step 6- Follow the same procedure for the rest of the three or four wheels by pressing the  key and then  key. (Refer to vehicle owners manual or other reference guides for TPM reset procedure.)

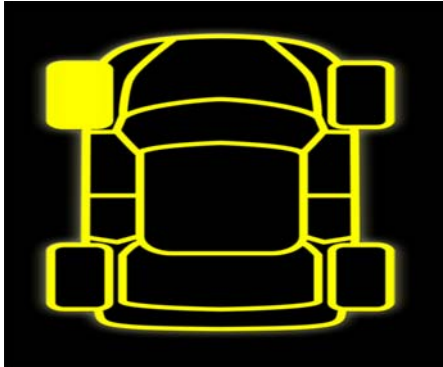


B.2 RESULTS DESCRIPTION

The picture below is an example of a valve data communication result:

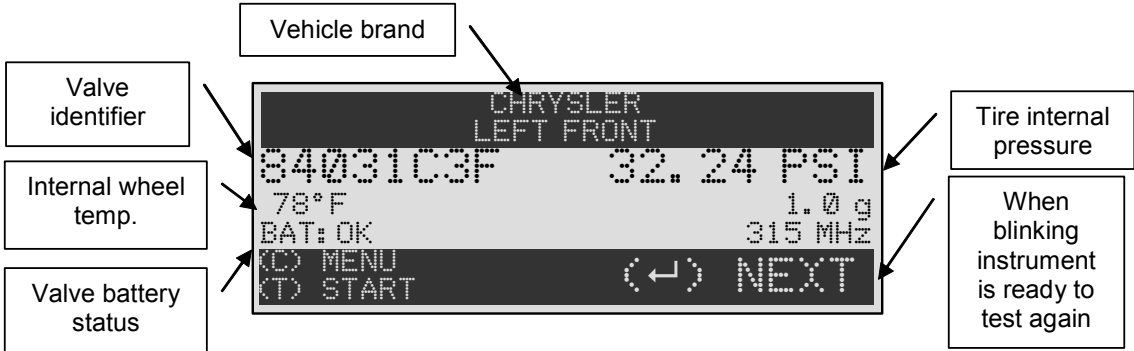
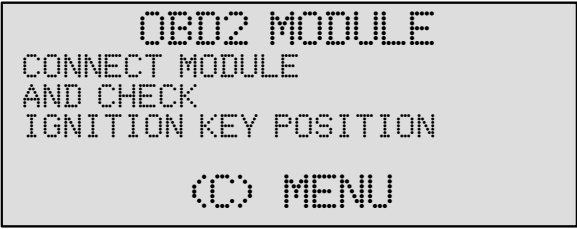

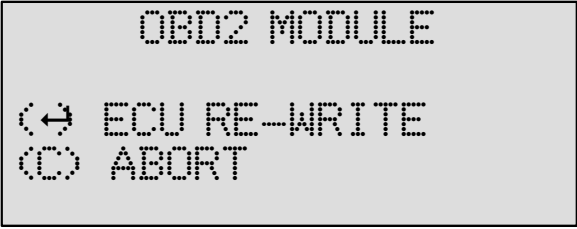



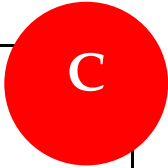
****Note:** The VT55 will identify the sensor information that is transmitted. Not all sensors transmit every piece of information shown.

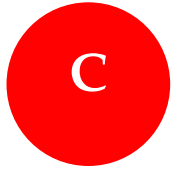

Section C - USING OBDII FUNCTION



Following step 6 in section B


<p>Connect the OBDII module with the Ateq VT55 using the RJ45 ports.</p>	 <p>The image shows a black rectangular device labeled 'ATEQ OBD2 INTERFACE MODULE'. It has a cable connected to one end and a small display or indicator on the other. Text on the device includes 'ATEQ', 'OBD2 INTERFACE MODULE', 'VPM', '10000412', 'VMP 2008', and 'WWW.ATEQ.COM'.</p>
<p>Locate the vehicle OBDII connector under the dashboard. Plug the Ateq OBDII programmer to this port. Turn the vehicle ignition key to the ON position (Engine Off).</p>	 <p>The screen displays the following text: 'OBD2 MODULE', 'CONNECT MODULE AND CHECK IGNITION KEY POSITION', and '(C) MENU'.</p>
<p>The VT55 displays the following message once you have collected all sensor information. Press the  key to re-write the valve information into the ECU.</p>	 <p>The screen displays the following text: 'OBD2 MODULE', '(←) ECU RE-WRITE', and '(C) ABORT'.</p>
<p>The VT55 will connect to the ECU and transmit valve information.</p>	 <p>The screen displays the following text: 'OBD2 MODULE', 'CONNECTING ...', and '(C) MENU'.</p>




<p>The message SUCCESSFUL TRANSFER appears when the new valve information has correctly transferred into the ECU. Disconnect the OBDII connector from the vehicle.</p>	
<p>The OBDII module will be updated when connected with the VT55. The screen to the right will appear if there are any new updates. Please follow instruction in SECTION F to update the VT55.</p>	

Section D - Installing USB Drivers

- 1) Please insert the CD that was provided with the VT55.
- 2) Connect the USB wire to the USB connector of your PC and VT55. Then turn on the instrument.
- 3) The following window will appear. Click the “Cancel” button in the bottom right corner of the screen.

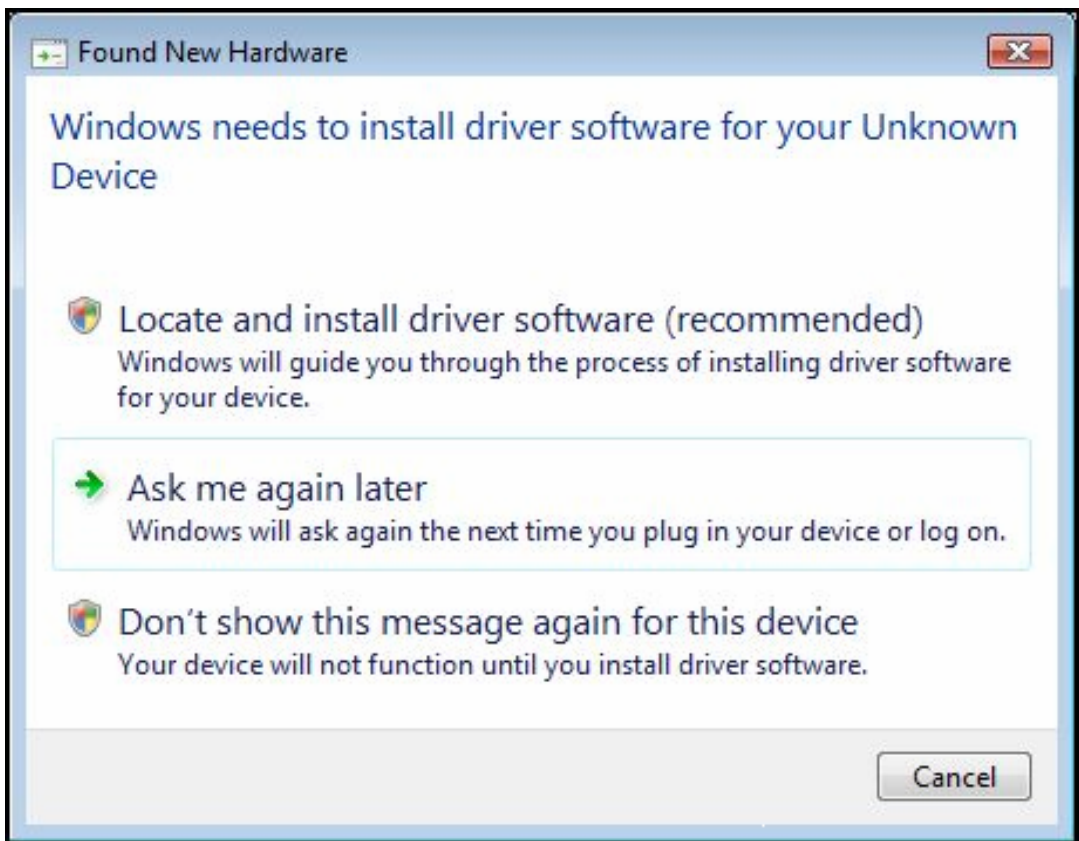


- 4) In the CD drive, open the file “AteqUsbDriver for VT55”.

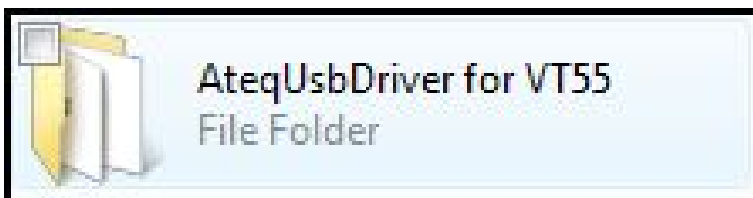

- 5) The following screen will appear. Depending on your operating system, open the file for “XP” or “VISTA”.



- 6) Using “VISTA” file as an example, the following window may appear. Select “Allow”.

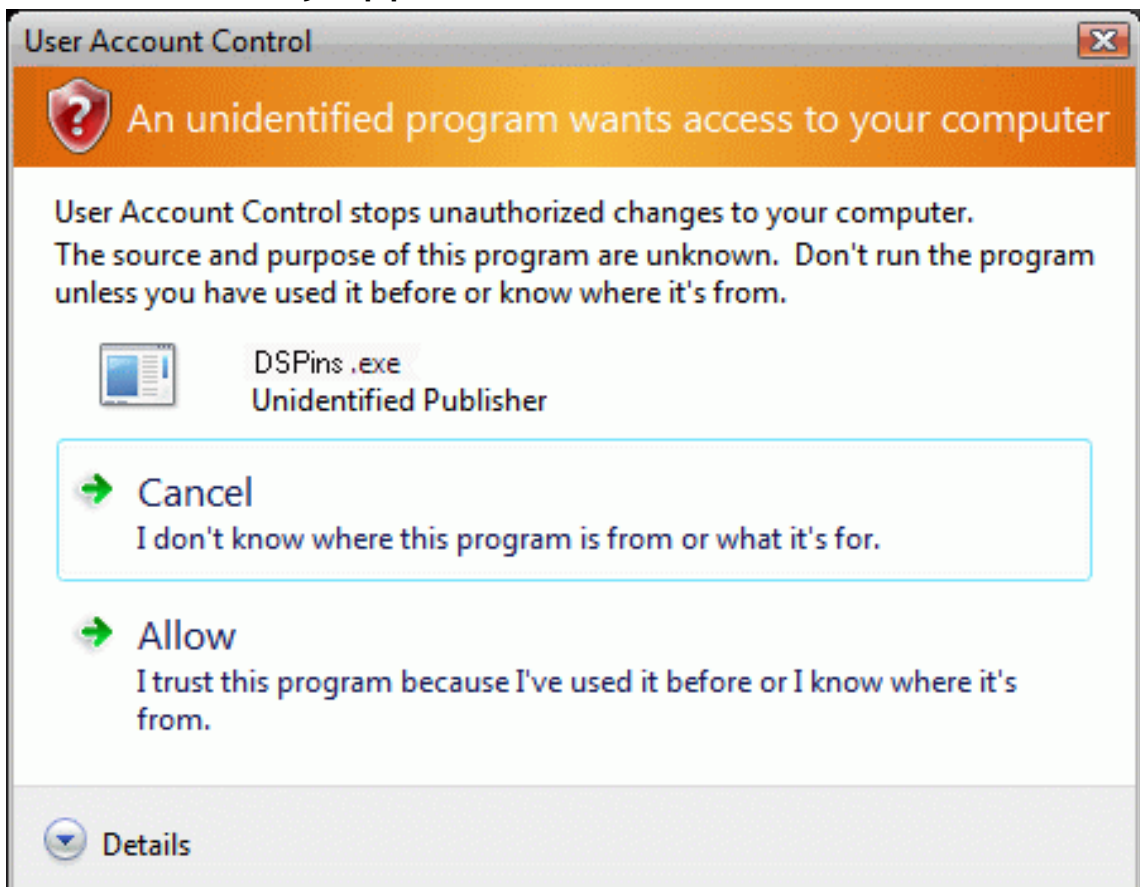

- 7) The following window will appear, click “Next >” to continue and follow the onscreen instructions to complete.



- 8) Click “Install driver software anyway” if this appears.



9) When the drivers are successfully installed, the following window will appear. Click “Finish”.



****Note:** Please refer to the user manual on CD for detailed instruction when using Windows XP. There are additional instructions if you are trying to use the RJ45 port with RS232 connection.


Section E - Installing WEB VT Software

E


- 1) Insert the CD, supplied with instrument, into the PC drive and click on the WebVT icon to start the program.




- 2) The following screen will appear. Click “Next>”

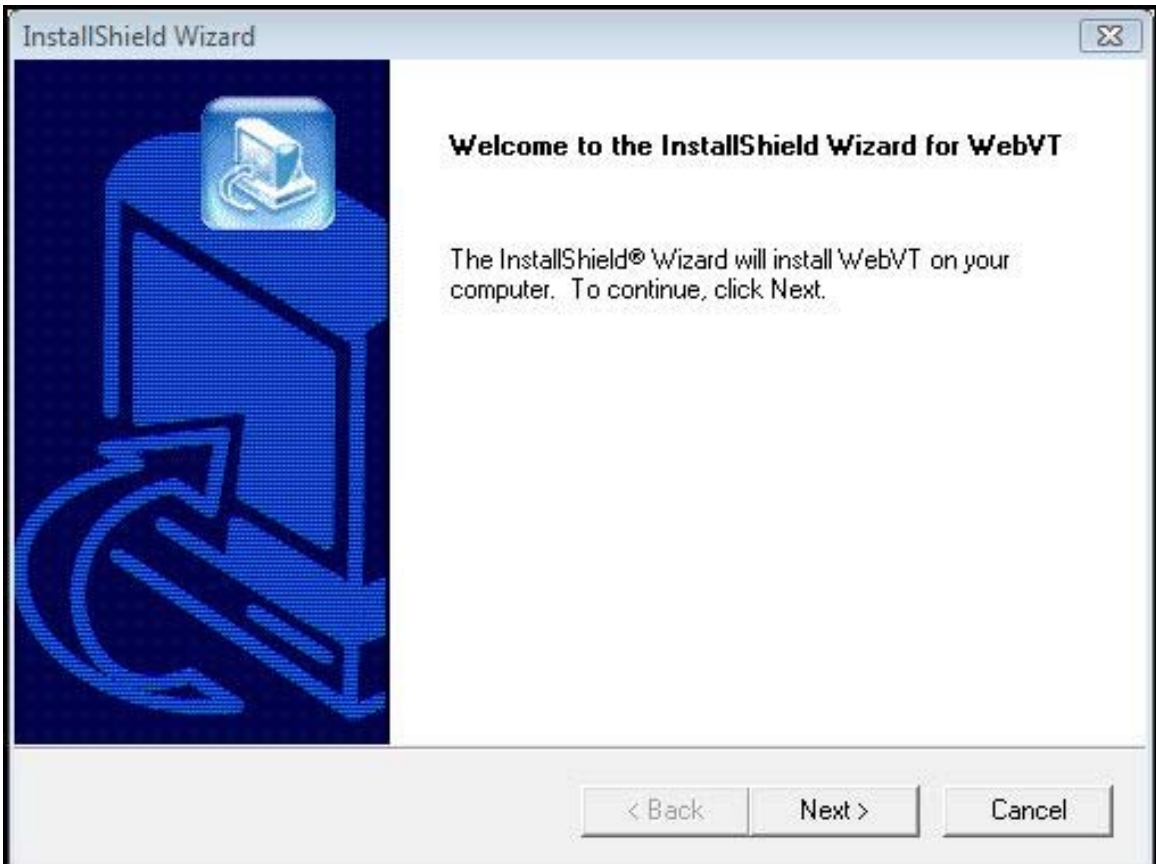

- 3) The following window will appear, please select the location you would like to save the program. Click “Next>”.

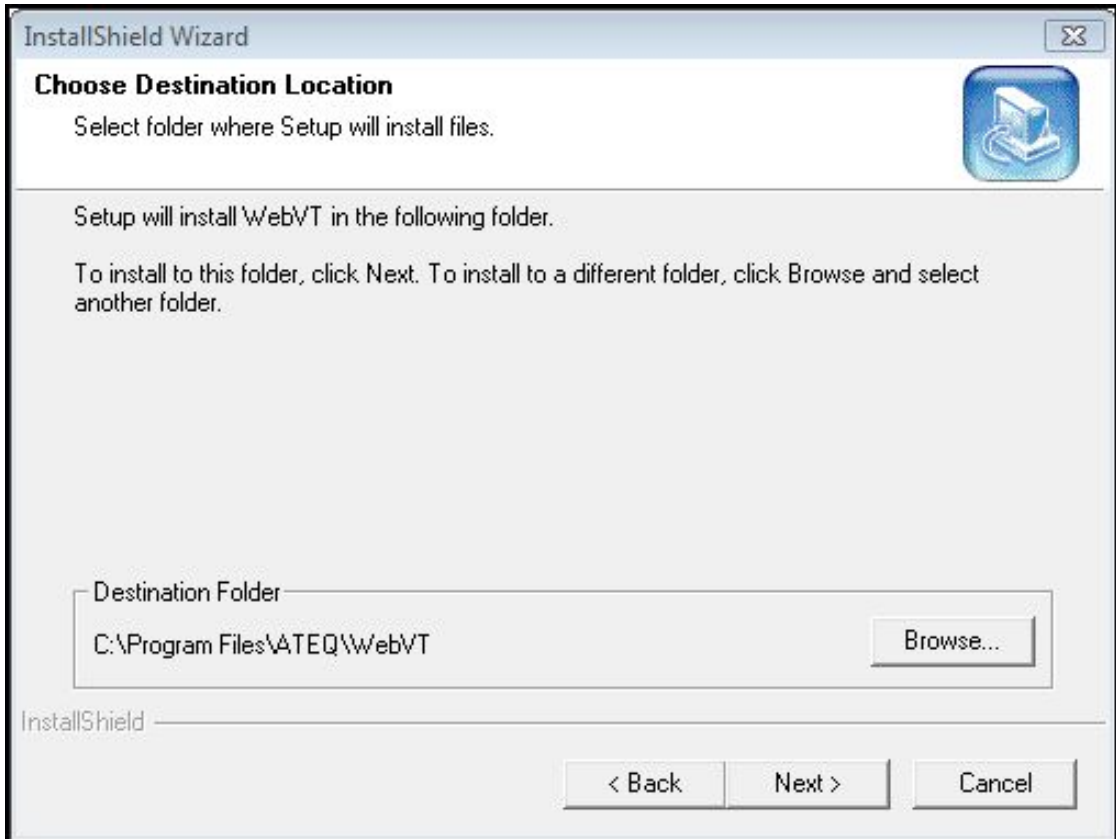

- 4) Click “Yes” when this window appears.

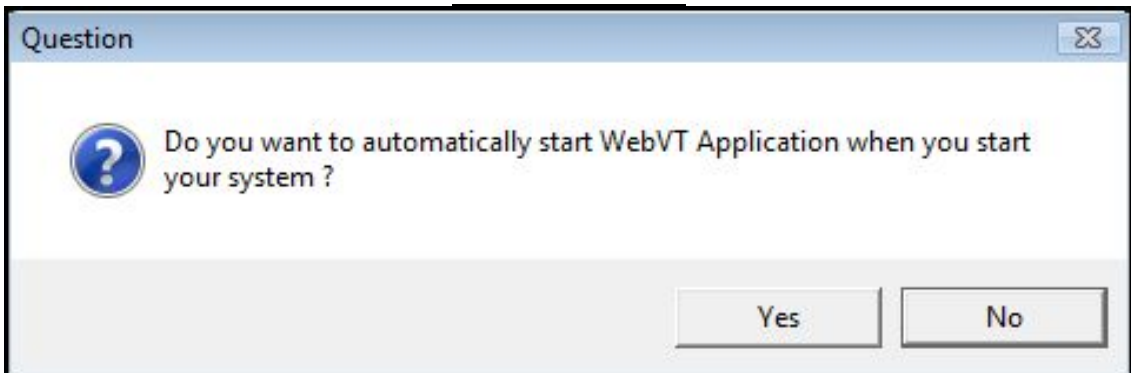

- 5) Click “Finish” when the WebVT installation is complete.

Section F - Updating VT55/Printing Results

F

- 1) Connect the USB cable from the VT55 to the PC.
Click on the WEB VT Icon to start the program.



- 2) The following screen appears. You may “Update Device” or print “Valve ID’s” from here as well.



- 3) Press “Yes” to update to the latest software version. Update will take several minutes to complete and the status bar will indicate the percentage of update completed.



- 4) When the update is complete, disconnect the VT55 USB cable and close the program.

****Note:** You must have an internet connection to update the VT55 with WebVT software.



TRP Test Box

- Pre-Test TPM sensors before you mount them to the tire.
- Ensure your gauge pressure matches the “Tire Relative Pressure”.
- Save valuable time.



CDP40 Pressure Calibrator

- Calibrate pressure gauge.
- Verify TPM pressure reading with pressure gauge.



ATEQ Corporation
42000 Koppernick Road
Canton, MI 48187

www.tpms-tool.com